



Lambda sensor fitting instructions



Lambda Sensor – LMBDA-01

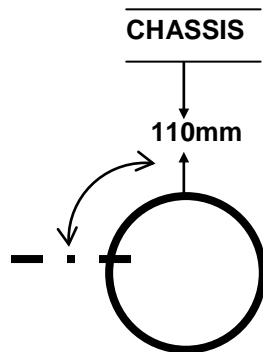

Try and place the sensor on top of the exhaust because of the possibility it could get knocked. If there is no room try to place it up to 90 degrees either side from the top. Only place the sensor where there is at least 110mm between the manifold and any part of the chassis to allow for removal.

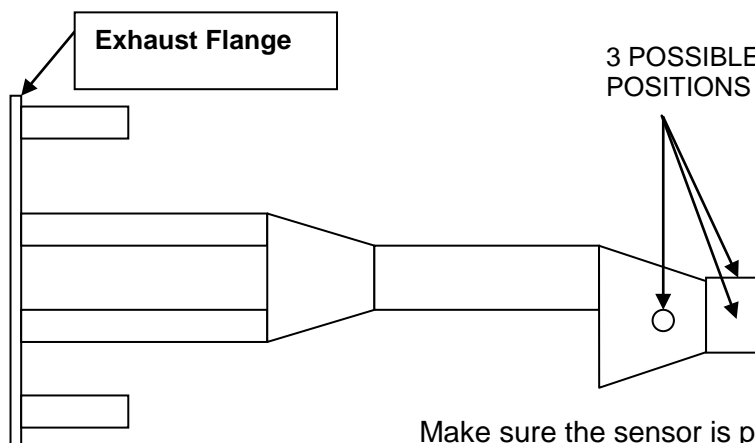

Make sure the sensor is placed back from the join to allow for good reading of all cylinders (where 2 goes into 1)

