


October 2013

SBD Plumbing of fuel system with swirl pot (For 8 Injectors)

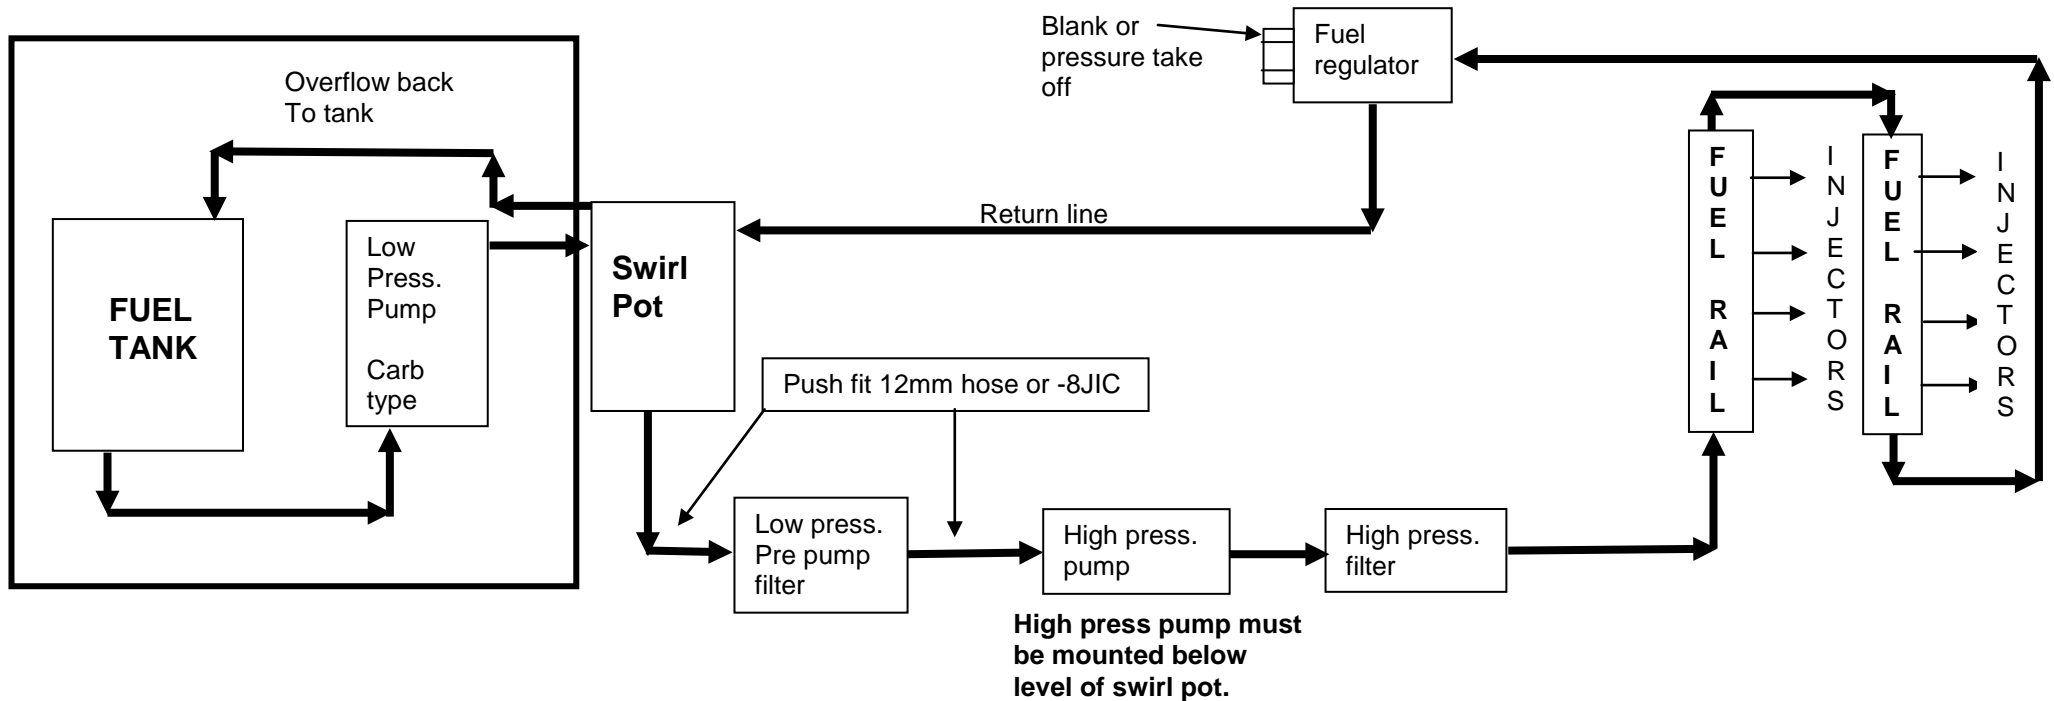

Notes.

1. On long runs use Teflon braided hose.
2. On short runs use rubber braided hose.
3. Use straight connectors where possible as they are approx. 1/3 of the price of angled ones.
4. High-pressure & Return to swirl pot couplings use JIC -6.



SBD Motorsport Ltd
Unit 15, Red Lion Business Park, Red Lion Road, Surbiton, Surrey. KT6 7QD
Tel:0208 391 0121
Email:sbdmotorsport@btconnect.com
Website:sbdev.co.uk