

Assembly instructions for idler bearings


1. Cut off plastic sleeve – if fitted



2. Put bearings in freezer overnight



3. Heat sleeve in an oven or use a butane blowlamp

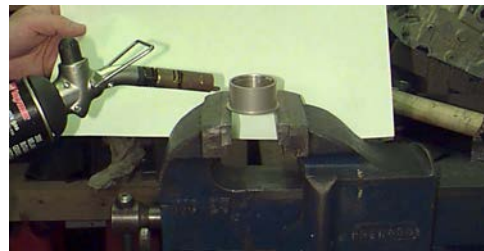

4. Insert bearing from freezer into hot sleeve
*****ALL BEARINGS ARE FITTED THE SAME WAY ROUND AS SHOWN IN PHOTO*****



5. Fit circlip



6. The finished assembly

